

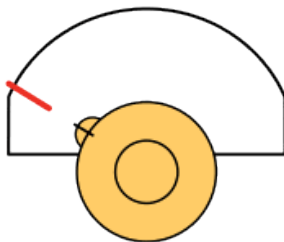
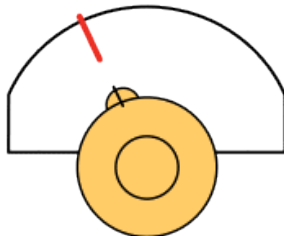
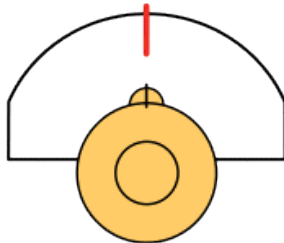






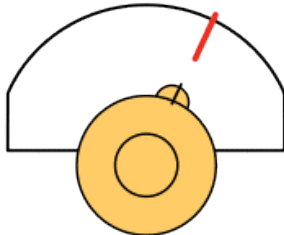


GE CLUTCH Shoe Settings

Inboard Rotation

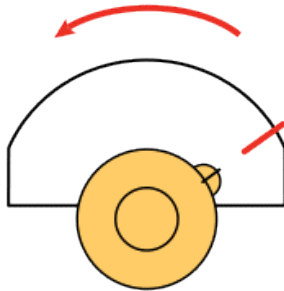

Outboard Rotation

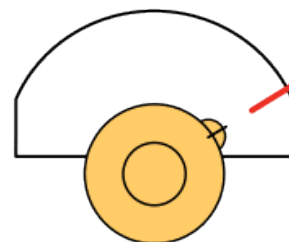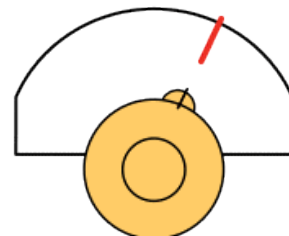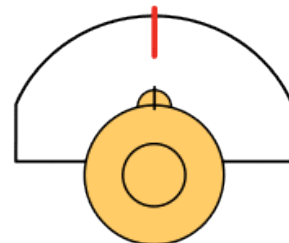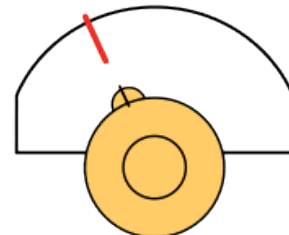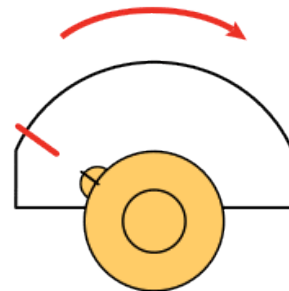

SETTING 1:

Heavy and Light Shoe.
For Rapid Engagement
and Low Inertia Starts.

SETTING 2:

Heavy Shoe Only.
For Moderate to Rapid Engagement
and Average Inertia Starts.

SETTING 3:

Light Shoe Only.
For Moderate Engagement
and Average Inertia Starts.

SETTING 4:

Heavy Shoe Only.
For Smooth, Gradual Engagement
and High Inertia Starts.

SETTING 5:

Heavy and Light Shoe.
For Very Smooth, Gradual Engagement
and High Inertia Starts.